

Materials

2 canning jar lid inserts
Outdoor Mod Podge
Foam brush
2 long floral picks
Decorative labels

You will need a pair of scissors.

Please note: If you are purchasing your own supplies, you will need to punch a small hole into the jar lid inserts about 1/4" from the edge. You can use a metal punch or a nail and hammer. Be careful of any sharp edges left over from the punchin.

Instructions


1. Cut out one of the decorative labels. Using the foam brush, apply a thin layer of glue to the metal side of the lid. Place the paper label onto the lid, centering it. If the label has a clear up and down, make sure that the top is towards the punched hole. Smooth out any air bubbles



2. Apply a very thin layer of glue all over the label and the metal side of the lid. Make sure to pay attention to the edges of the paper especially. Let dry for 30 minutes. Repeat 2 more times for full water resistance.



3. When the final layer is dry to the touch, thread the end of the floral pick wire through the hole. There should be about 1/4" of wire between the lid and the pick to allow for freedom of movement. Wrap the wire around and through the hole 2 more times. Then wrap the end of the wire securely around the top of the pick to finish.

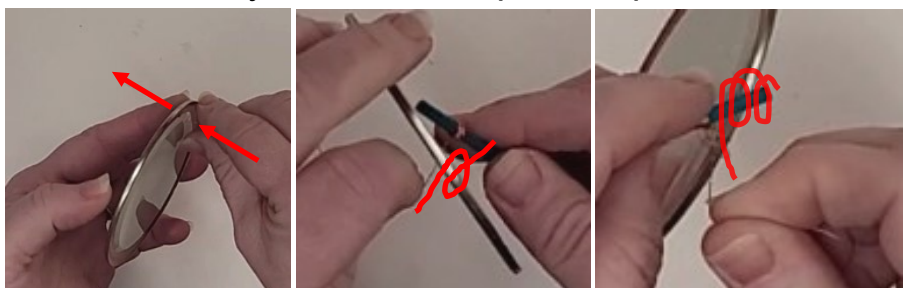

4. Let the plant marker sit for 4 weeks to allow the glue to cure for full water resistance. Before using, write the plant name on the label in a permanent marker like Sharpie.



Please note - Outdoor Mod Podge is water RESISTANT, not WATERPROOF. This means that if you use it outside, you may see some weathering, and it may wear off after a few months of rain. If you want to make it completely waterproof, you can buy waterproof sealer at craft stores.



